

## Installation Guide

### VHRC Column Handle

The purpose of this guide is to:

1. Describe installation of the handle to the rear of the VHRC column assembly.

#### Parts Reference


The parts list below includes parts and hardware that will be used in this installation procedure (see images below for parts and hardware). Note that the handle can be installed with or without the VHRC column installed to base.

Item #	Description	Qty
1	VHRC Handle	1
2	1/8" hex wrench	1

**Tools Required:** Philips screwdriver, 1/8" hex wrench (supplied with handle)

#### Installing VHRC Handle to column rear track

1. Remove two #10 screws and top plate from VHRC column, retain parts.
2. Align VHRC handle with rear track on VHRC column, slide handle into track as shown.

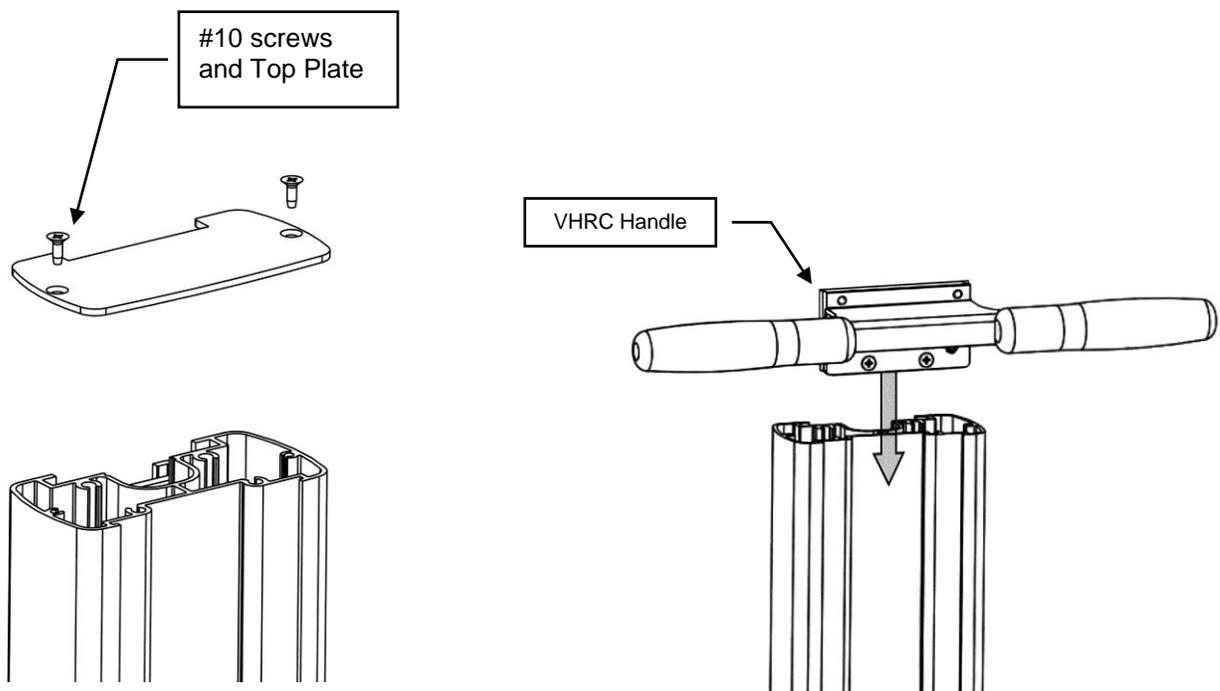

### Positioning and securing VHRC Handle within column

1. Slide VHRC Handle to desired position on rear of column and secure position by tightening the (2) 1/4"-20 set screws with a 1/8" hex wrench.
2. Replace VHRC column top plate using #10 screws removed earlier.

