

Installation Guide

Philips TeleMon – M-Series Arm Wall Mount Kit

The purpose of this guide is to:

- 1. Describe attachment of Philips-supplied TeleMon Slide to Mounting Adapter
- 2. Describe mounting of power supply holster in Channel.
- 3. Describe mounting of M-Series Arm in Channel.
- 4. Describe mounting and dismounting of TeleMon.



Parts Reference

The following parts and hardware will be used in this procedure (see photo for parts, hardware not shown):

Item #	Description	Qty
1	M-Series Arm (with TeleMon Mounting Adapter)	1
2	M4 x 16mm Flat Head Machine Screw (FHMS)	4
3	Adjustable Stop	1
4	Power Supply Holster	1
5	Cable Retainer	1
6	M4 x 6mm Pan Head Machine Screw (PHMS)	1
7	M4 Flat Washer	1
8	1/8" Hex Key	1
9	5/32" Hex Key	1
10	Channel Cover (includes instructions – not shown)	1




Tools Required: Phillips screwdriver, 1/8" and 5/32" hex keys (provided), 1/2" [13mm] wrench.

Attaching TeleMon Slide to TeleMon Mounting Adapter

Installation Note: TeleMon Slide is provided by Philips with the monitor.

1. Fasten TeleMon Slide to Mounting Adapter with four (4) M4 x 16mm FHMS (below left).

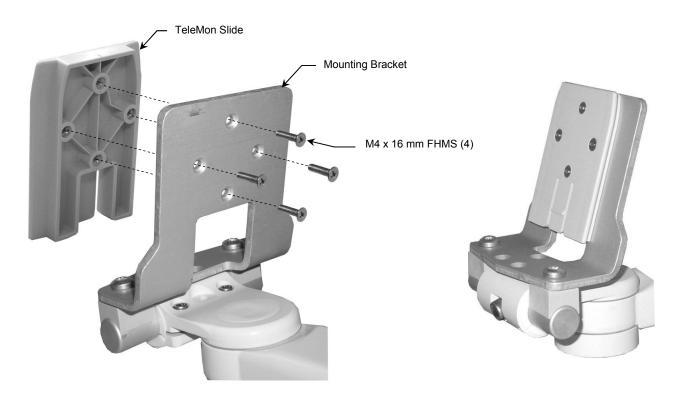


Mounting Power Supply Holster and M-Series Arm

- 1. Slide Power Supply Holster into Channel and move to mounting position (below left). Using 1/8" hex key provided, tighten set screw at upper left corner of Slide
- 2. Slide power supply into Holster. A Cable Retainer is provided for attachment of cable to side of Power Supply Holster. Route cable through Retainer and fasten Retainer to Holster with M4 x 6mm PHMS and flat washer.





- 3. Insert Adjustable Stop in top of Channel, move to desired Arm-mounting position and tighten.
- 4. Install Arm by guiding Slide (rear of Arm) into top of Channel. Slide Arm to rest against Adjustable Stop and tighten two (2) set screws (bottom of Slide) with the 1/8" hex key provided.

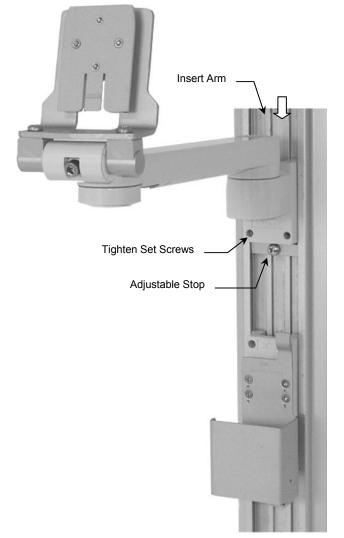

Installing the Wall Channel Cover (not shown)

Install the Wall Channel Cover in accordance with the Channel Cover Installation Guide (DU-UT-0001-20).

Arm Adjustments

Refer to "INSTALLATION & OPERATING MANUAL FOR M-SERIES MOUNTS" (DU-WMM-0001)

Mounting TeleMon

Slide TeleMon onto Telemon Slide (below left).
 Dismount TeleMon by pulling Release Tab at bottom of Slide and lifting upward (below right).



