# Installation Guide

GE Healthcare PRN-50 Mounting Bracket for F5 Hanger

The purpose of this guide is to:

1. *Describe attachment of Mounting Bracket to F5 Hanger (page 1).*
2. *Describe mounting of PRN-50 on Mounting Bracket (page 2).*

The following parts and hardware are included in this installation kit (hardware not shown):
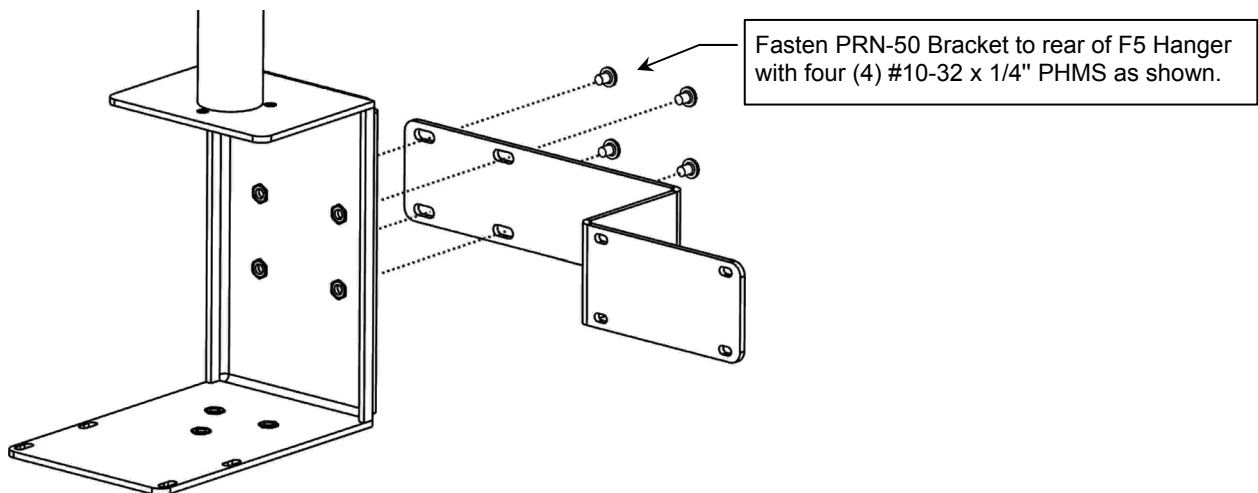
Item #	Description	Qty
1	PRN-50 Mounting Bracket	1
2	#10-32 x 1/4" Pan Head Machine Screw (PHMS)	4
3	M4 x 12 mm PHMS	4

1
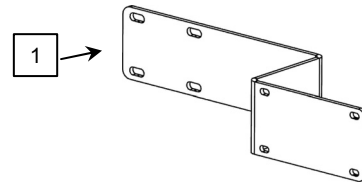
Tools required

• Phillips screwdriver (not provided)

Attaching PRN-50 Bracket to Hanger

Fasten PRN-50 Bracket to rear of F5 Hanger with four (4) #10-32 x 1/4" PHMS as shown.

Mounting PRN-50 on Mounting Bracket

Fasten PRN-50 to Mounting Bracket with four (4) M4 x 12 mm PHMS as shown.
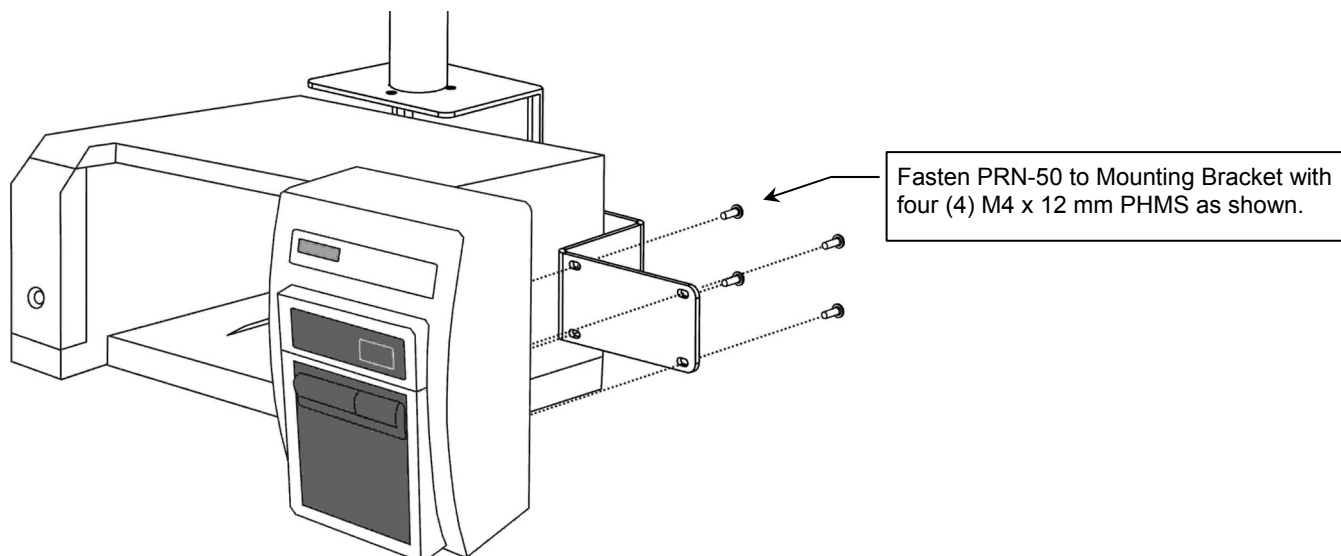
Routine Maintenance of the Mounting Assembly

Periodically inspect all mounting hardware. Tighten or adjust as necessary for optimal operation and safety.

Cleaning the Mounting Assembly

CAUTION: GCX makes no claims regarding the efficacy of the listed chemicals or processes as a means for controlling infection. Consult your hospital's infection control officer or epidemiologist. To clean or sterilize mounted instruments or accessory equipment, refer to the specific instructions delivered with those products.

1. The mounting assembly may be cleaned with most mild, non-abrasive solutions commonly used in the hospital environment (e.g. diluted bleach, ammonia, or alcohol solutions).

2. The surface finish will be permanently damaged by strong chemicals and solvents such as acetone and trichloroethylene.

3. Do not use steel wool or other abrasive material to clean the mounting assembly.

4. Damage caused by the use of unapproved substances or processes will not be covered by warranty. We recommend testing of any cleaning solution on a small area of the mounting assembly that is not visible to verify compatibility.

5. Never submerge or allow liquids to enter the mounting assembly. Wipe any cleaning agents off of the mounting assembly immediately using a water-dampened cloth. Dry mounting assembly thoroughly after cleaning.