


### Installation Guide

#### Bracket Mount for HP t620/t620 PLUS Thin Client (Refer to qualified personnel)

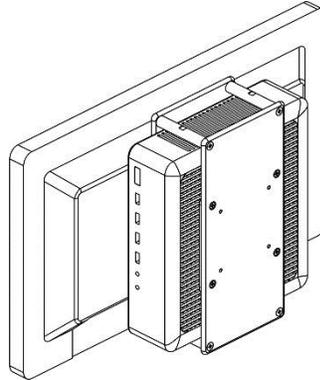


The purpose of this guide is to:

1. Describe attachment of Device (page 2).
2. Describe attachment of Bracket Mount to VESA Plate (page 3).

#### Parts Reference

The following parts and hardware are included in this installation kit:

Item #	Description	Qty
1	Mounting Plate	2
2	2.8"/7.1cm Stand Off	4
3	1.8"/4.6cm Stand Off	4
4	10-32 x 1/2" FHMS	8
5	M4 x 12mm FHMS	4
6	M4 x 14mm FHMS	4
7	M4 x 8mm PHMS	4

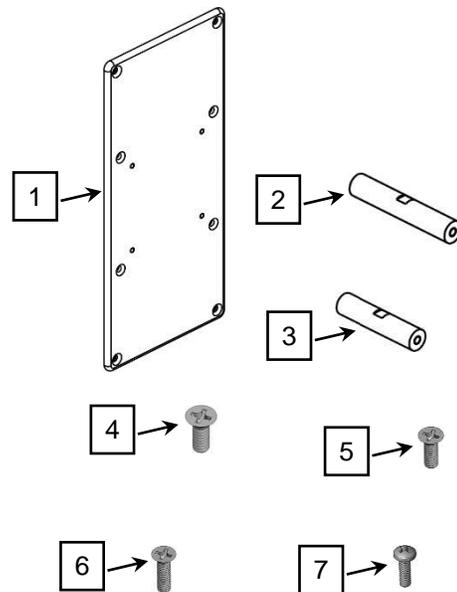


#### Tools required


- Phillips Screwdriver (not provided)
- 7/16" Wrench (not provided)

## Installing Device


1. Using the 100mm x 100mm four hole mounting pattern, fasten HP Thin Client to Mounting Plate using four (4) M4 x 12mm FHMS. Orient HP Thin Client as shown.

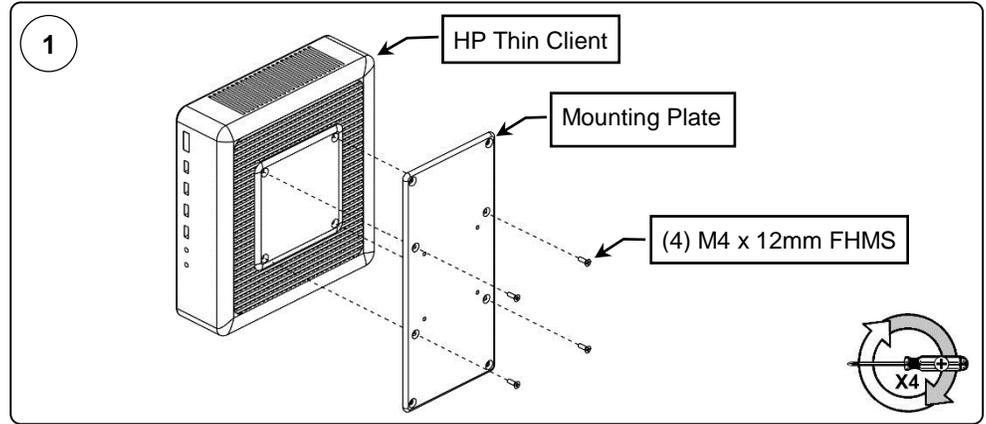


2. If using the **t620** Thin Client, use 1.8"/4.6cm Stand Offs provided. If using the **t620 PLUS** Thin Client, use 2.8"/7.1cm Stand Offs provided. Assemble four (4) Stand Off to Mounting Plate Using four (4) 10-32 x 1/2" FHMS. Use a 7/16" Wrench (not provided) to hold Stand Off while tightening screws.

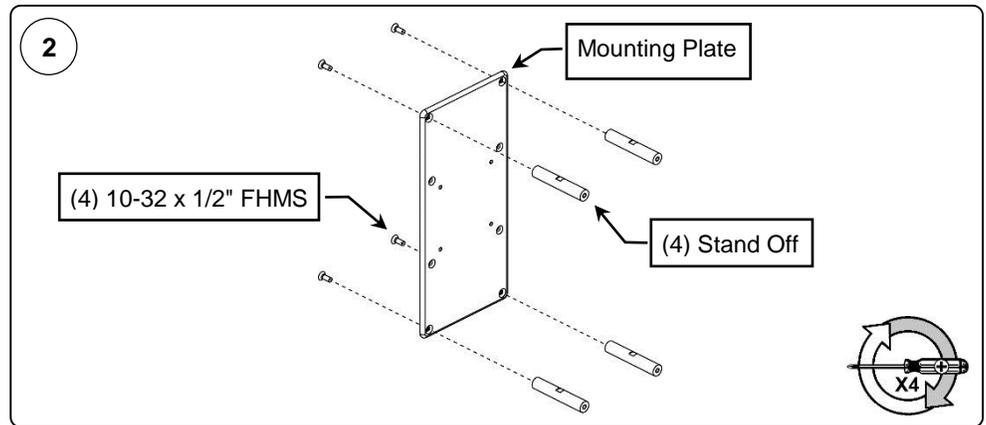

3. Using the 100mm x 100mm four hole mounting pattern, fasten Display to Mounting Plate using four (4) M4 x 14mm FHMS. Orient Mounting Plate vertically with stand offs facing away from Display as shown. NOTE: Use the appropriate length screw for attachment to Display as called out by flat panel manufacturer if 14mm is incorrect.

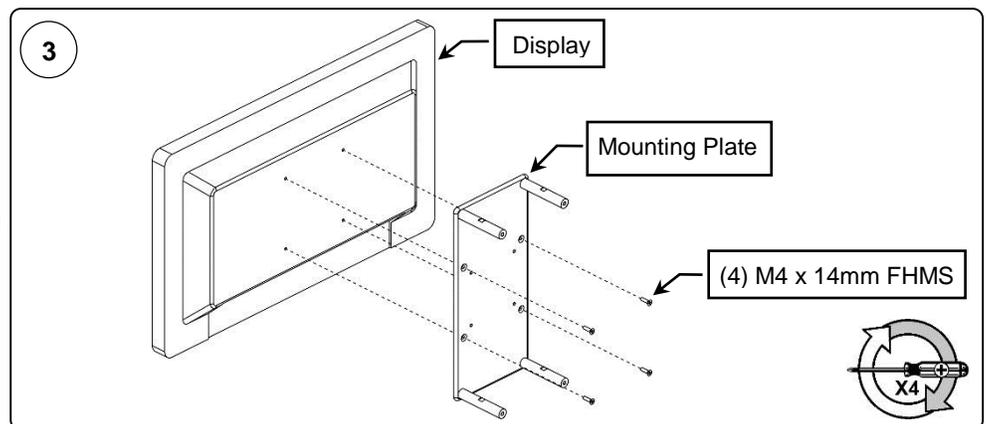


4. Fasten the HP Thin Client Mounting Plate Assembly onto the Display Mounting Plate Assembly using four (4) 10-32 x 1/2" FHMS.

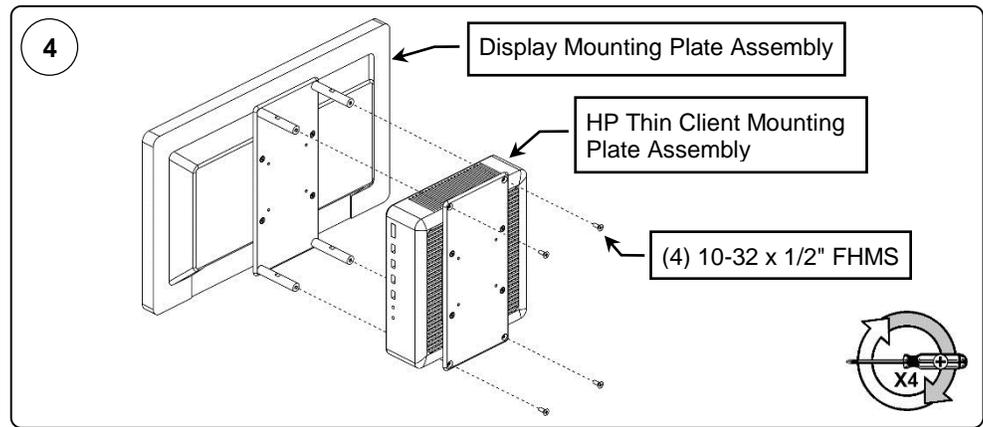

### Installing Display/Thin Client Assembly onto VESA Plate

- Refer to DU-FLP-0008-45 or similar instructions for mounting Display to L-Bracket Assembly. Use four (4) M4 x 8mm PHMS provided.

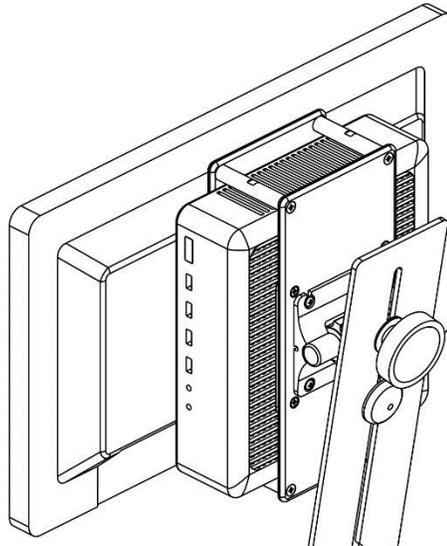

### Routine Maintenance

Periodically inspect all fasteners associated with the mounting system. Tighten or adjust fasteners as necessary for optimal operation and safety.

### Cleaning the Mounting Assembly

1. The mounting assembly may be cleaned with most mild, non-abrasive solutions commonly used in the hospital environment (e.g. diluted bleach, ammonia, or alcohol solutions).
2. The surface finish will be permanently damaged by strong chemicals and solvents such as acetone or trichloroethylene.
3. Do not use Steel wool or other abrasive material.
4. Damage caused by the use of unapproved substances or processes will not be warranted. It is recommended that you test any cleaning solution on a small area of the mounting assembly that is not visible to verify compatibility.
5. Never submerge or allow liquids to enter the mounting assembly. Wipe any cleaning agents off of the mounting assembly immediately, using water dampened cloth. Dry the assembly thoroughly after cleaning.

**CAUTION:** GCX makes no claims regarding the efficacy of the listed chemicals or processes as a means for controlling infection. Consult your hospital's infection control officer or epidemiologist. To clean or sterilize mounted devices or accessory equipment, refer to the specific instructions delivered with those products before installing the arm in the Channel.