

EVO™ SE



Full-sized non-powered medical carts
for laptops and LCDs



Left to right: EVO SE 10 Locking Laptop Cart, EVO SE 20 LCD Cart

EVO innovation in a new line of versatile, full-sized, non-powered laptop and LCD carts.



Comfort Glide Lift Technology™

Enables instant, silent, one-handed sit-to-stand height adjustment.

Metal construction—lightweight but heavy duty

Aircraft-grade aluminum and welded steel construction—engineered to outlast carts built from plastics and composites.

Proven ergonomics, top to bottom

Precision balance, ergonomic keyboard/mouse trays and thoughtfully designed accessories maximize nurse comfort, minimize exertion, and reduce risk of injury.

Superior, UV-ready infection control

Smooth, non-porous powder coat finish on all metal surfaces withstands UV-B and UV-C sterilization.

Impressive workflow versatility

Add up to 4 EVO Clearview Storage™ drawers plus a wide range of peripheral mounts and cart accessories

Ships fully assembled

With smart cable management for easy integration, rapid deployment and the fastest possible time-to-value.

Industry-best 10-year limited warranty

Zero-maintenance by design, with no service contract required.

Left to right: EVO SE 00 Podium Laptop Cart, EVO SE 10 Locking Laptop Cart, EVO SE 20 LCD Cart

EVO SE 10

Locking Laptop Cart

Laptop security, desktop comfort.

EVO SE 10 secures a laptop beneath a full-sized worksurface, and provides the shift-long ergonomic comfort of a full-sized keyboard and mouse.

- **Large 16.5" x 2.25" screen slot.** Fits the largest laptop displays (17"+) with plenty of room for screen angle adjustment.
- **Spacious electronics bay.** Smart cable management for power cords and bricks, USB cables and hubs.
- **Research-based ergonomics.** Positive/negative keyboard tilt and exclusive raised mouse tray minimize risk of carpal tunnel injury.
- **Versatile and customizable.** Use as-is for rounding and registration, or add storage and accessories for a wide range of workflows.
- **Strain-relieved charge cord.** Recharge the laptop from any outlet without risk of damage to the laptop, cables or peripherals.



Compact, comfortable and efficient. EVO ClearView Storage™ (p. 5) and front-mounted cart accessories (p.6) eliminate awkward stretching and wasted motion at the bedside.



EVO SE 00

Podium Laptop Cart

Cost-effective, medical-grade.

The bedside is no place for a kidney cart. EVO SE Podium combines the mobility your nurses want, the reliability and durability your IT staff demands, and the professional hygienic appearance patients expect.

- **Quiet at the bedside.** Smooth-rolling rubber casters and silent Comfort Glide height adjustment eliminate noises that wake or disturb patients.
- **Looks clean and stays clean.** The white, high-gloss antimicrobial finish wipes clean easily and stands up to UV sterilization.
- **Built for care, and built to last.** Lightweight aircraft-grade aluminum and welded steel construction for unmatched durability.

EVO SE 20

LCD Cart

Corded mobile LCD workstation.

EVO SE 20 is a cost-effective, right-sized, more mobile alternative to fixed or wall-mounted EHR workstations.

- **Supports full-screen EHR.** EVO SE 20 holds a micro PC and an LCD/LED flat-screen up to 24"—or an all-in-one (AIO) PC up to 24".
- **8 ft. radius of motion.** Unique tethered power cord provides plenty of in-room mobility for engaging patients at the bedside.
- **Flexible and economical.** Relocate easily from room to room as needed—no wiring or wall prep required.




EVO ClearView Storage™

The first storage drawers designed specifically for nurse comfort.

Ergonomic, side-opening EVO ClearView storage lets nurses view and access drawer contents with less bending and stretching, and without backing up from the cart. With ClearView nurses can work comfortably and confidently between patient beds, at the med dispenser, or in any crowded or tight space.

- Add up to 4 standard drawers or two deep drawers to your EVO SE
- Choose among 3 bin sizes for organizing medications and supplies
- Available in electronic locking or non-locking configurations

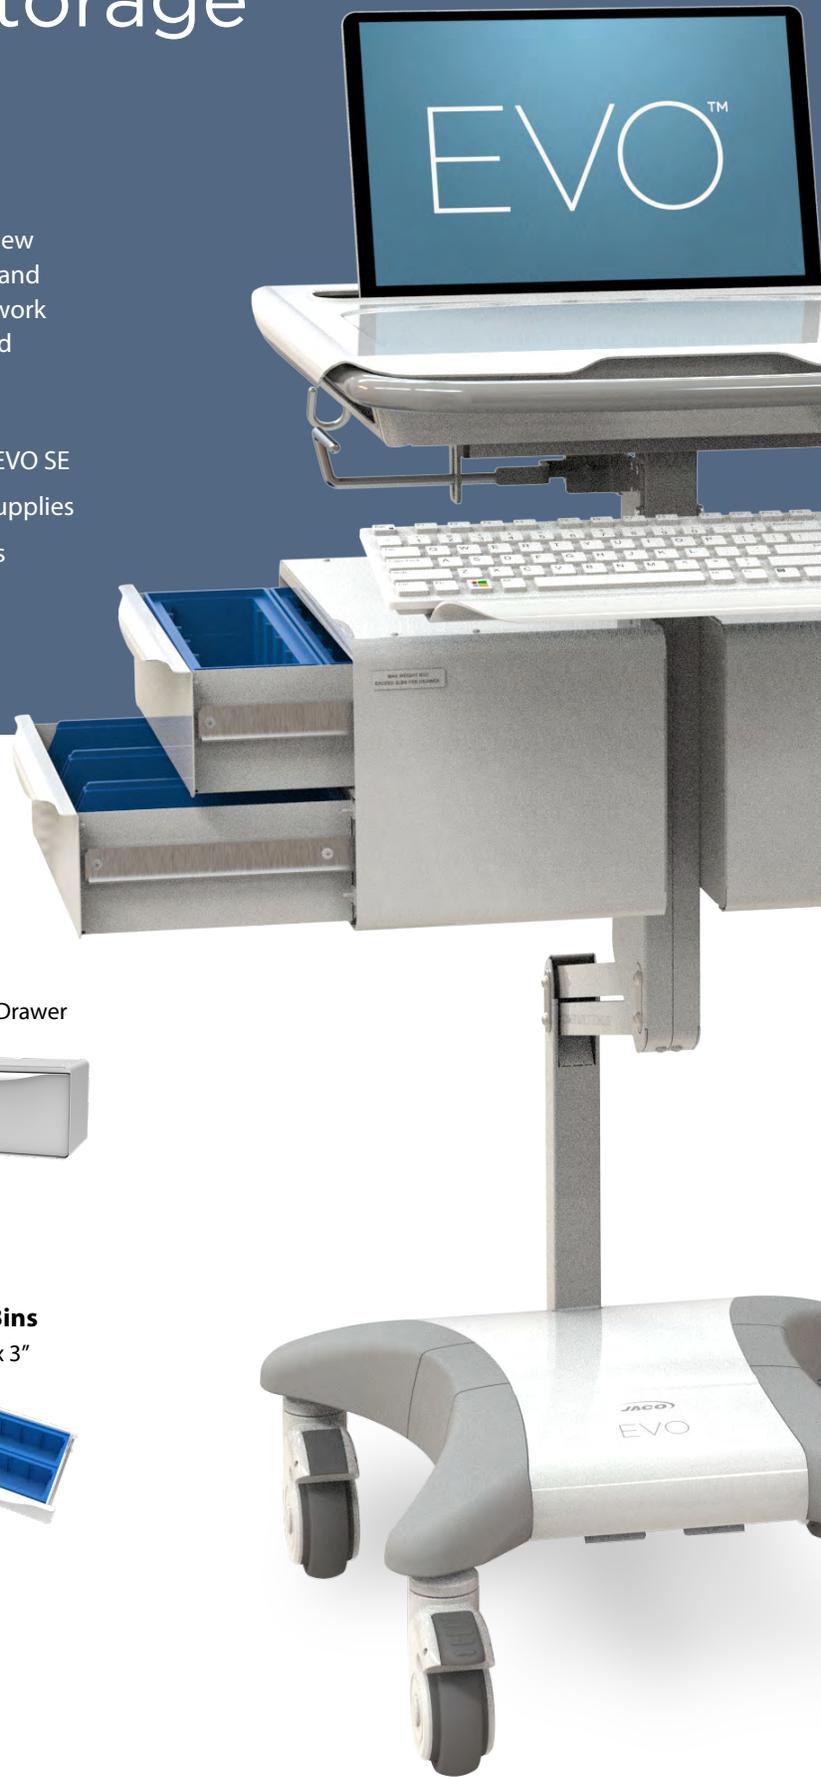

ClearView Cabinet Options

Single Drawer

14.5" w x 9.25" d x 4.5" h

Holds 1 Standard Drawer



Double Drawer

14.5" w x 9.25" d x 8.25" h

Holds 2 Standard Drawers or 1 Deep Drawer



ClearView Drawer and Bin Options*

Standard Drawer

12.5" x 7.5" x 3.5"



1 Large Bin

10" x 7" x 3.2"



2 Long Bins

10.5" x 3" x 3"



3 Mini Bins (NEW)

3.5" x 7.3" x 2.75"



Deep Drawer

12.5" x 7.5" x 7.1"



*All drawer and bin dimensions are interior dimensions.

More EVO SE Accessories

Equip your EVO SE for a wide range of point-of-care workflows and clinical applications.



Wipe holders



Scanner and medical equipment mounts



Telemedicine camera mounts



Dual-wheel casters



Podium laptop lock (key lock)



Wire baskets

Make it *yours.*

Add custom colors and your logo. Reinforce your brand, identify carts by department, or fit your cart to your care environment.



Warranty, Service & Support

EVO SE Warranties



Nobody protects your investment like Jaco.

Every EVO SE is covered by Jaco's industry-best EVO warranties:

- **10-Year Warranty** on all Jaco-manufactured standard structural components, dress covers, and the Comfort Glide Lift Technology™ assembly
- **7-Year Warranty** on all Jaco-manufactured optional components and cart accessories
- **3-Year Warranty** on all OEM-supplied components and accessories, and on all Jaco electrical components

Terms and conditions apply. For more information or a complete warranty statement contact your Jaco representative.

The best service plan is a trouble-free product.

Jaco EVO medical computer carts are so reliable, over 99% of EVOs are purchased without a service contract—including 100% of EVOs purchased in 2021. Collectively, Jaco EVO customers save millions of dollars every year by avoiding unnecessary service coverage costs.

Jaco Promise Care: Standard support with Every EVO cart

- Product training for your nurses, clinicians, and IT staff
- Support from Jaco engineers who build your cart
- 2-hour response during business hours (8 a.m. to 5 p.m. ET)
- 24 x 7 access to product and troubleshooting documentation
- Proactive fleet performance reviews
- Full in-warranty part availability
- On-site support for system issues

Optional Services and Support

- Unloading and unpacking your carts (includes disposal of packaging)
- 'White glove' loading dock service
- Factory or on-site PC imaging and integration
- Premium service coverage plans
- Extended warranties and a la carte coverage

Specifications



EVO SE 00
Podium Laptop Cart



EVO SE 10
Locking Laptop Cart



EVO SE 20
LCD Cart

Part No.	EVO-SE-00	EVO-SE-10	EVO-SE-20
Worksurface Dimensions	19.5" w x 18" d	19.5" w x 18" d*	19.5" w x 18" d
Device Bay Dimensions	n/a	16.25" w x 17" l x 2.25" h	16.25" w x 17" l x 2.25" h
Worksurface Height Range	31.5" to 47"	31.25" to 47"	31.25" to 47"
Keyboard Height Range	n/a	26" to 41.25"	26" to 41.25"
Base	18" w x 17.75" l	18" w x 17.75" l	18" w x 17.75" l
Casters	4" single-wheel (2 locking)	4" single-wheel (2 locking)	4" single-wheel (2 locking)
Starting Weight	51 lb.	55 lb.	60 lb.
Device Support	Laptop	Laptop with screen ≤ 17"	Micro PC and LCD ≤ 24" (≤ 27" with optional VESA stand)
Warranty	10-year limited warranty	10-year limited warranty	10-year limited warranty

*Including 16.5" x 2.25" screen slot

Schedule a Tele-Demo

A private Jaco Tele-Demo is the fastest and easiest way to learn everything you need to know about our new EVO SE workstations.

Call 800-649-2278 for more information.

Simple. Solid. Smart.